



1. get a 55 gal. drum. I get them from busy car washes.
2. lay it on side and draw a line around the circumference about 10-12" from the bottom end.

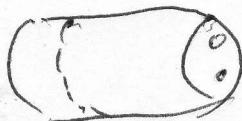



3. Cut along that line with a jigsaw or hand saw. leaves you a shallow tub about 12" tall by 24" in diameter



4. Now cut that in half.



5. Now get some flat steel or aluminum $\frac{1}{8}'' \times 1\frac{1}{2}''$ is probably fine. These will be your brackets that attach the fender wells to the trailer. I imagine a bend something like this:

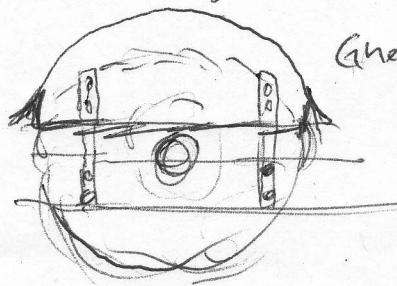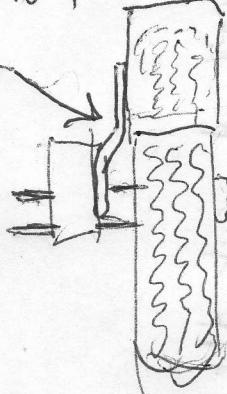

Ghetto fender
from

